



Home Docking System *HI2817*

INSTRUCTION MANUAL



Warnings and Precautions

TO PREVENT FIRE OR SHOCK HAZARDS, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol, located on back or bottom of the unit, is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



This product utilizes a Class 1 laser to read Compact Discs. This laser Compact Disc Player is equipped with safety switches to avoid exposure when the CD door is open and the safety interlocks are defeated. Invisible laser radiation is present when the CD Player’s lid is open and the system’s interlock has failed or been defeated. It is very important that you avoid direct exposure to the laser beam at all times. Please do not attempt to defeat or bypass the safety switches.

CAUTION: TO PREVENT ELECTRIC SHOCK, MATCH WIDE BLADE OF PLUG TO WIDE SLOT, FULLY INSERT.

To reduce the risk of electric shock, do not remove cover (or back). There are no user-serviceable parts inside. Please refer any servicing to qualified service personnel.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user’s authority to operate the equipment.


WARNING: Danger of explosion if the remote control’s batteries are incorrectly installed. Replace only with the same or equivalent battery.

WARNING: The remote control’s button cell battery contains mercury. Do not put in the trash, instead recycle or dispose of as hazardous waste

WARNING: Use of this unit near fluorescent lighting may cause interference regarding use of the remote. If the unit is displaying erratic behavior move away from any fluorescent lighting, as it may be the cause.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

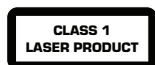

The symbol for
Class II (Double
Insulation)

Important Safety Instructions

1. Read these instructions. All the safety and operating instruction should be read before the product is operated.

2. Keep these instructions. The safety and operating instruction should be retained for future reference.

3. Heed all warnings. All warning on the product and in the operating instructions should be adhered to.

4. Follow all instructions. All operating and use instructions should be followed.

5. Water and Moisture: Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement, or near a swimming pool, and the like. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on apparatus.

6. Cleaning: Clean only with a dry cloth. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.

7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface.

8. Heat: Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Grounding or Polarization: Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Power-Cord Protection: Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.

11. Accessories: Only use attachments/accessories specified by the manufacturer. Do not place this product on an unstable cart, stand tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the

product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

12. A product and cart combination should be moved with care. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.



PORTABLE
CART
WARNING

S3125A

13. Lightning: Unplug this apparatus and disconnect the antenna or cable system during lightning storms or when unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.

14. Servicing: Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

15. Power Sources: Only connect to the type of house-hold power supply as indicated in the operating instructions and rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instruction.


16. Overloading: Do not overload wall outlets or extension cords as this can result in a risk of fire or electric shock.

17. Object and Liquid Entry: Never push objects of any kind or spill liquid into this product through openings as this could result in a risk of fire or electric shock.

18. Replacement Parts and Safety Check: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer. Ask the service technician to perform safety checks to ensure proper operation to avoid possible fire, electric shock, or other hazards.

19. Outdoor Antenna Grounding: If an outside antenna or cable system is connected to the product, be sure the antenna or cable

system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna connection to grounding electrodes, and requirements for the grounding electrode.

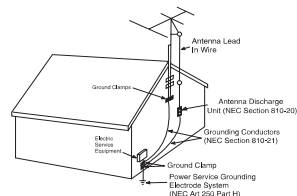

20. Wall or Ceiling Mounting: The product should be mounted to a wall or ceiling only as recommended by the manufacturer.


21. Where the AC plug or an appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.

22. Ventilation: Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

23. Protective Attachment Plug: The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

24. Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.



Features

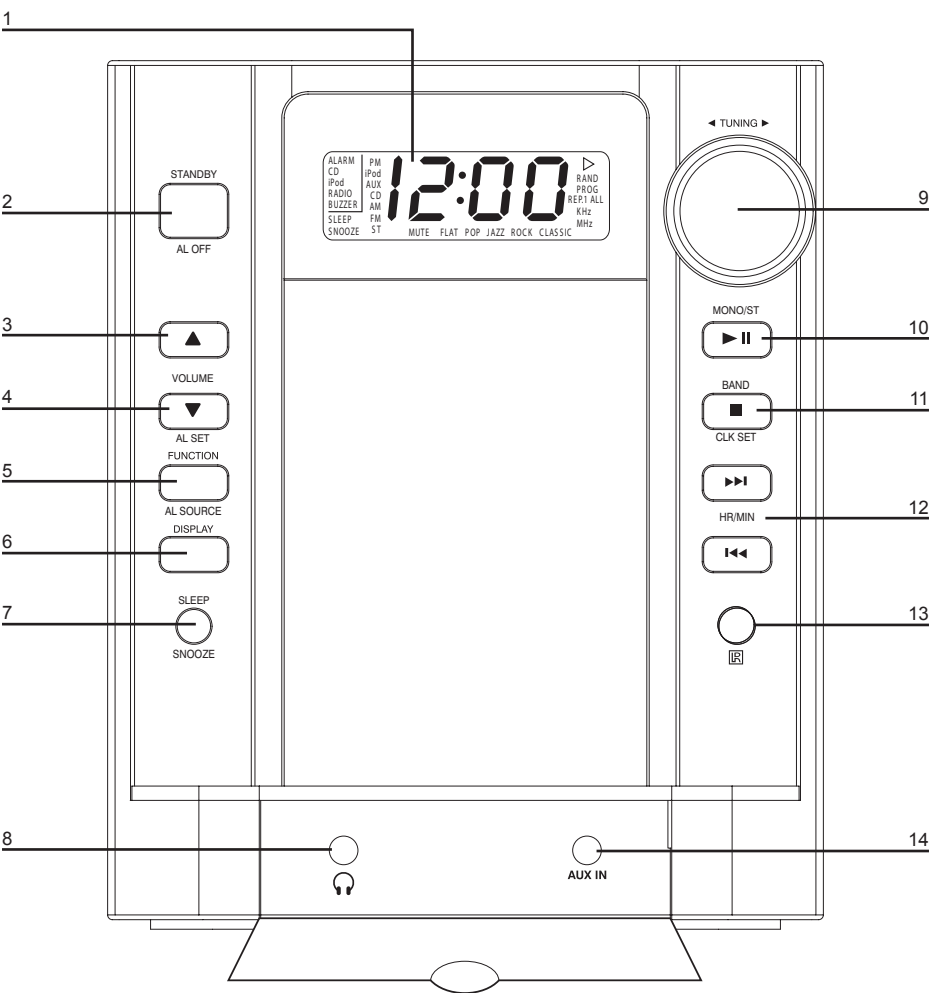

Features Defined

- 1 LCD Display** The Backlit LCD displays the time, functions, radio frequency, and alarm times.
 - 2 Power/AL OFF** Press the Power button to turn the unit on and off. After the alarm sounds, press the AL OFF button to turn the alarm off until the next day.
 - 3 VOL UP** With the Power on, press the VOL UP button to turn the volume up.
 - 4 VOL DN/AL SET** With the Power on, press the VOL DN button to turn the volume down. With the Power off, press the AL SET button to enter the alarm set mode.
 - 5 FUNCTION/AL SOURCE** Press the FUNCTION button to cycle between CD, radio, iPod, and Aux functions. When setting the alarm, press the AL SOURCE button to set the alarm source (CD, radio, iPod, or Buzzer).
 - 6 DISPLAY** Press the DISPLAY button to view the time, alarm time, and current function.
 - 7 SLEEP/SNOOZE** With the Power on, press the SLEEP button to set the sleep timer between 10 and 90 minutes. When the alarm sounds, press the SNOOZE button to delay the alarm for an additional 9 minutes.
 - 8 Headphone Output** Attach headphones to the Headphone Output to listen to the unit through headphones.
 - 9 TUNING** Rotate the TUNING dial clockwise to increase the radio frequency and counter-clockwise to decrease the radio frequency.
 - 10 PLAY/PAUSE/MONO/ST** Press the PLAY/PAUSE button to play or pause a CD or iPod. Press the MONO/ST button to switch the unit's speaker mode between mono and stereo.
 - 11 STOP/BAND/CLK SET** Press the STOP button to stop a CD or iPod from playing. Press the BAND button to switch between AM and FM radio modes. Press the CLK SET button to activate the clock set mode.
 - 12 SKIP/SEARCH/HR/MIN** Press the SKIP/SEARCH buttons to skip to the next or previous track or radio frequency of an iPod, CD, or Radio. Press and hold the SKIP/SEARCH button to search forwards or backwards through an individual track of an iPod, or CD. When setting the clock or alarm, use the HR/MIN buttons to cycle through the hour and minute.
 - 13 Infrared Receiver** The Infrared Receiver receives the signals sent from the remote.
 - 14 Auxiliary Input** Use the Auxiliary Input to connect an external audio source to the unit. This requires a 1/8" miniphono plug (not included).
-


Features

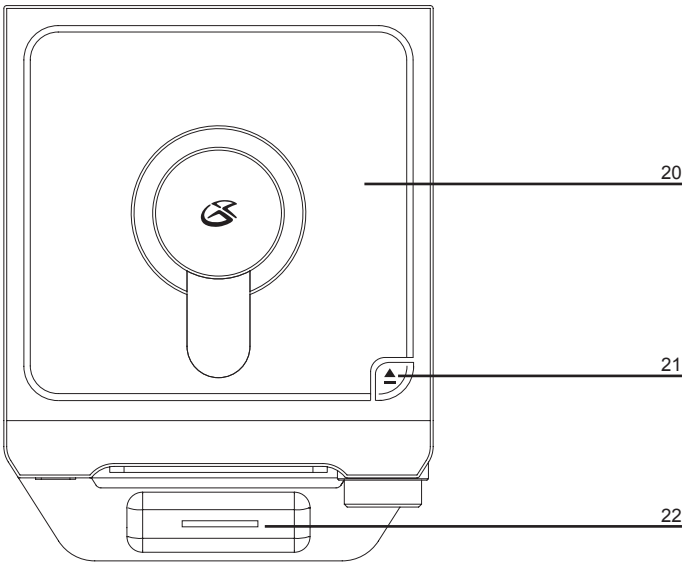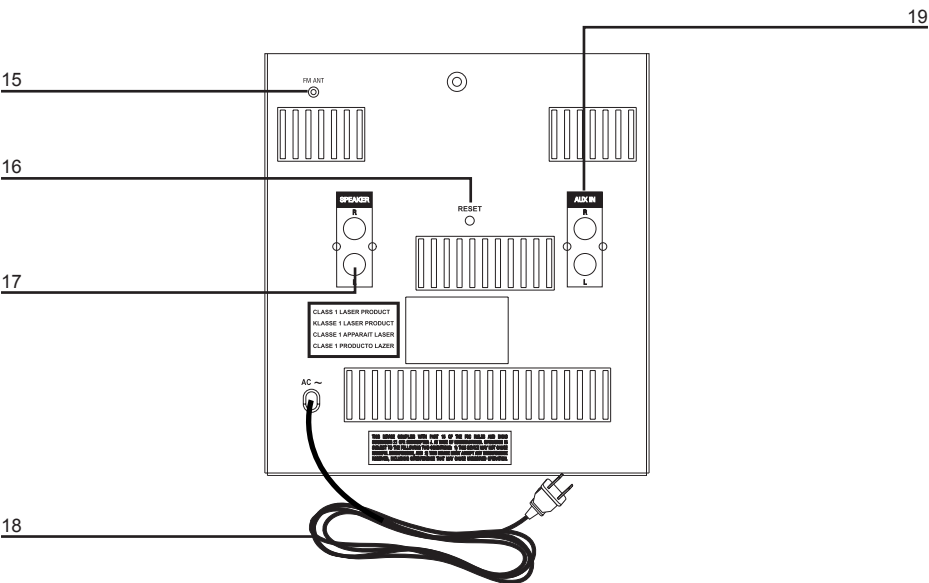

Features Defined

- 15 FM Antenna** The FM Antenna provides reception for the FM radio.
 - 16 RESET** Press the RESET button to restore the default factory settings.
 - 17 Speaker Outputs (R/L)** Use the Speaker Outputs to connect the included external speakers.
 - 18 AC Cord** Plug the attached AC Cord into a standard outlet to power the unit.
 - 19 AUX IN R/L** Use the Auxiliary Input to connect an external audio source to the units left and right speakers. This requires a RCA cord (not included).
 - 20 CD Door** Press the CD Eject button to open the CD Door. To close the door, manually ease it back down into place.
 - 21 CD Eject** Press the CD Eject button to open the CD Door.
 - 22 Dock for iPod** Using the included inserts, comfortably dock an iPod, iPod with color display, iPod with video or iPod nano (2G). This dock will charge an iPod and allow it to be played through the systems speakers.
-

Peripherals

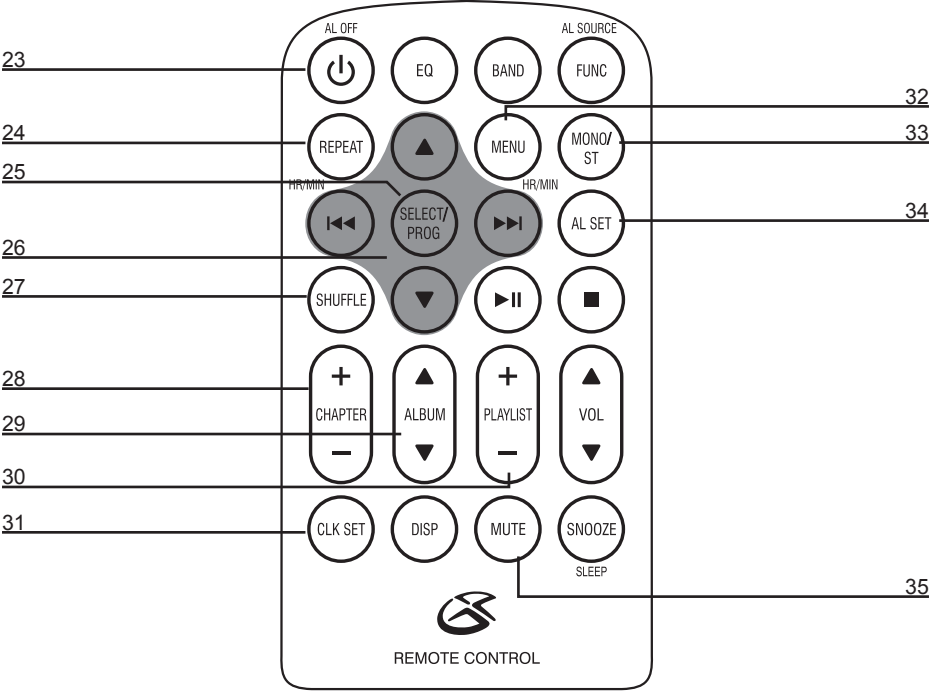

Peripherals Defined

- 23 Power/AL OFF** Press the Power/AL OFF button to turn the unit on and off. While an alarm is sounding, press the Power/AL OFF button to turn the alarm off until the next day.
-
- 24 REPEAT** Press the REPEAT button once to repeat a single track, or twice to repeat all tracks on an iPod or CD.
- *The LCD will display “REP 1” or “REP ALL” to indicate which repeat mode is active.*
-
- 25 SELECT/PROG** Press the SELECT button to select songs, photos, or movies on an iPod. Press the PROG button to program CD tracks to play in a designated order.
-
- 26 Navigation Controls** Use the Navigation Controls to navigate through an iPods menu system, tune the radio frequency, or skip and search through tracks on an iPod or CD.
-
- 27 SHUFFLE** Press the SHUFFLE button to activate the shuffle feature on a docked iPod.
-
- 28 CHAPTER** Press up on the CHAPTER button to increase the chapter number, or press down on the CHAPTER button to decrease the chapter number.
-
- 29 ALBUM** Press up or down on the ALBUM button to cycle through the iPod’s albums.
-
- 30 PLAYLIST** Press up on the PLAYLIST button to cycle up through the playlists on an iPod, or press down on the PLAYLIST button to cycle down through the playlists on an iPod.
-
- 31 TIME/CLK SET** With the unit off, press the TIME/CLK SET button to activate the clock set function.
-
- 32 MENU** Press the MENU button to navigate through the menus on an iPod.
-
- 33 MONO/ST** Press the MONO/ST button to switch the audio mode between stereo and mono.
-
- 34 AL SET** Press the AL SET button to activate the alarm 1 and 2 set function.
-
- 35 MUTE** Press the MUTE button to mute the unit’s volume.
-

Operations

Setting the Clock

- a. On the Remote, press the TIME/CLK SET button.
- b. Press the SKIP/SEARCH buttons to cycle up or down through the hours.
- c. Press the TIME/CLK SET button to set the hour.
- d. Press the SKIP/SEARCH buttons to cycle up or down through the minutes.
- e. Press the TIME/CLK SET button to set the minute and finish setting the clock.

Setting the Alarm

- a. On the Remote, press the AL SET button.
- b. Press the SKIP/SEARCH buttons to cycle up or down through the hours.
- c. Press the AL SET button to set the hour.
- d. Press the SKIP/SEARCH buttons to cycle up or down through the minutes.
- e. Press the AL SET button to set the minute and finish setting the alarm.
 - *After the alarm sounds, press the SNOOZE button to delay the alarm for an additional 9 minutes, or press the Power/AL OFF button on the remote to turn the alarm off.*

Programming a CD

- a. Insert a CD into the unit.
- b. Press the FUNCTION button until the unit is in CD mode.
- c. Press the SELECT/PROG button on the remote.
 - *The number 01 will blink once on the display, indicating that the song that is chosen next will play first.*
- d. Press the SKIP/SEARCH buttons to cycle through the tracks on the CD.
- e. Press the SELECT/PROG button to select a track to play first.
 - *The number 02 will blink once on the display, indicating that the song that is chosen next will play second. This indication will blink every time a track is programmed.*
- f. Repeat steps d and e until the desired tracks have been programmed.
- g. Press the PLAY/PAUSE button to begin playing the tracks. Use the SKIP/SEARCH buttons to cycle through the programmed tracks at any time.
 - *To reset the programmed tracks, press the FUNCTION button to exit and re-enter CD Mode.*

Operations

Connecting other Digital Audio Devices

- a. Connect an audio device to the AUX input.
- b. Press the FUNCTION button to set the unit to AUX mode, as indicated by the LCD Display.
- c. The audio device will now play through the speakers of the player.

Docking an iPod

- a. Locate the numbered Bracket that fits the iPod that will be docked.

Each included Bracket has a number on it, indicating which iPod model that bracket is compatible with. See the separate bracket chart page to identify which bracket is needed.

- b. Snap the Bracket into place over the iPod connector in the Docking Station.

All Brackets will only fit one way onto the Dock.

When inserting an iPod nano (first or second generation), slide the Dock connection on the unit so that it matches the opening on the iPod nano (first or second generation).

- c. Connect the iPod to the iPod connector inside the Docking Station.

Once an iPod is connected to the Docking Station, the unit will charge the docked iPod.

Playing a Docked iPod

- a. After the iPod is docked onto the unit, press the FUNCTION button to switch the unit to iPod mode.
- b. Press the PLAY/PAUSE button to begin playing the docked iPod.
- c. Press the STOP button to stop an iPod during play.



Service Information

Address 2116 Carr Street, St. Louis MO, 63106

Phone 1-314-621-2881

Fax 1-314-588-1805

Email prodinfo@gpx.com

Website www.gpx.com

To download this Instruction Manual in English, Spanish, or French visit the Support section at www.gpx.com.

Para descargar este manual de instrucción en inglés, español, o francés visite la sección de la ayuda en www.gpx.com.

Pour télécharger ce manuel d'instruction en anglais, espagnol, ou le Français visitez la section de soutien à www.gpx.com.

© 2007 Digital Products International (DPI, Inc.) iPod is a trademark of Apple Inc., registered in the U.S. and other countries. All other trademarks appearing herein are the property of their respective owners. All products subject to change without notice.